


### PRINTING AND FITTING SPECIFICATIONS

- Print this document on letter size sheets of paper (8.5 x 11in).
- Ensure you print at 100 % scale.
- Measure both sides of this box to check scale is correct.
- Fit the prints together following the numbering system on the edge of each sheet. Ensure crosses are aligned.
- Tape the sheets together and cut around the Pack's outline
- When fitting this printed template to your bike, keep in mind that the Frame Pack will be more flexible as it is built from fabric.

10cm  
3.9in

10cm / 3.9in

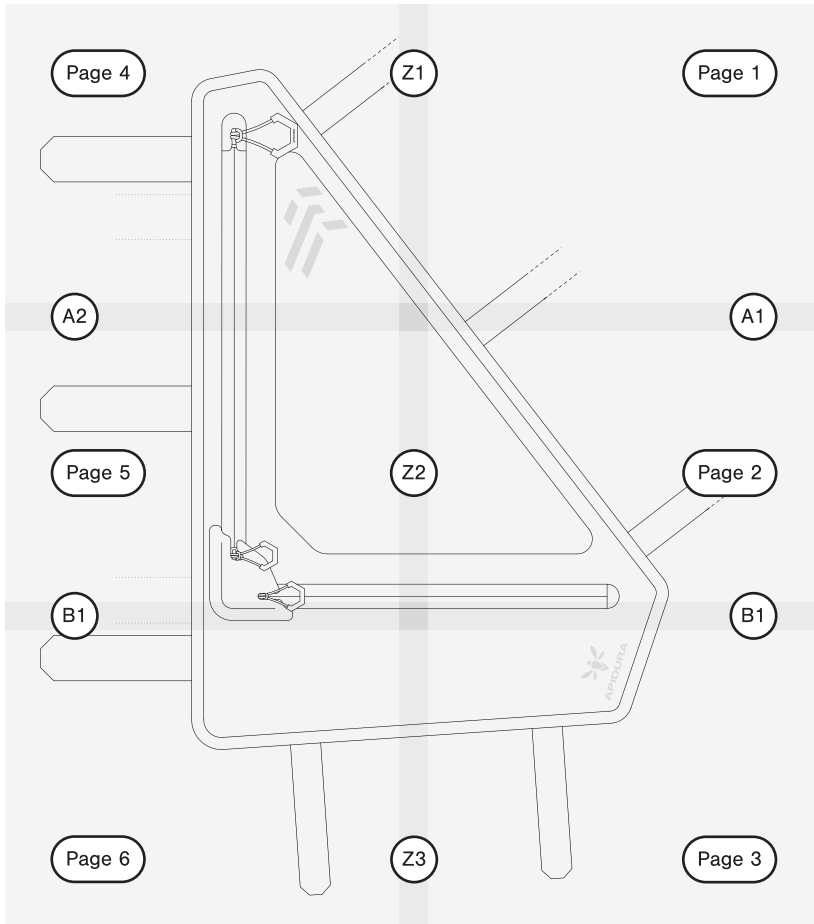

### SCALE EXAMPLE OF FINAL TEMPLATE


A1




This webbing strap is  
27cm long (10.6in long)  
(6in long)

Z1




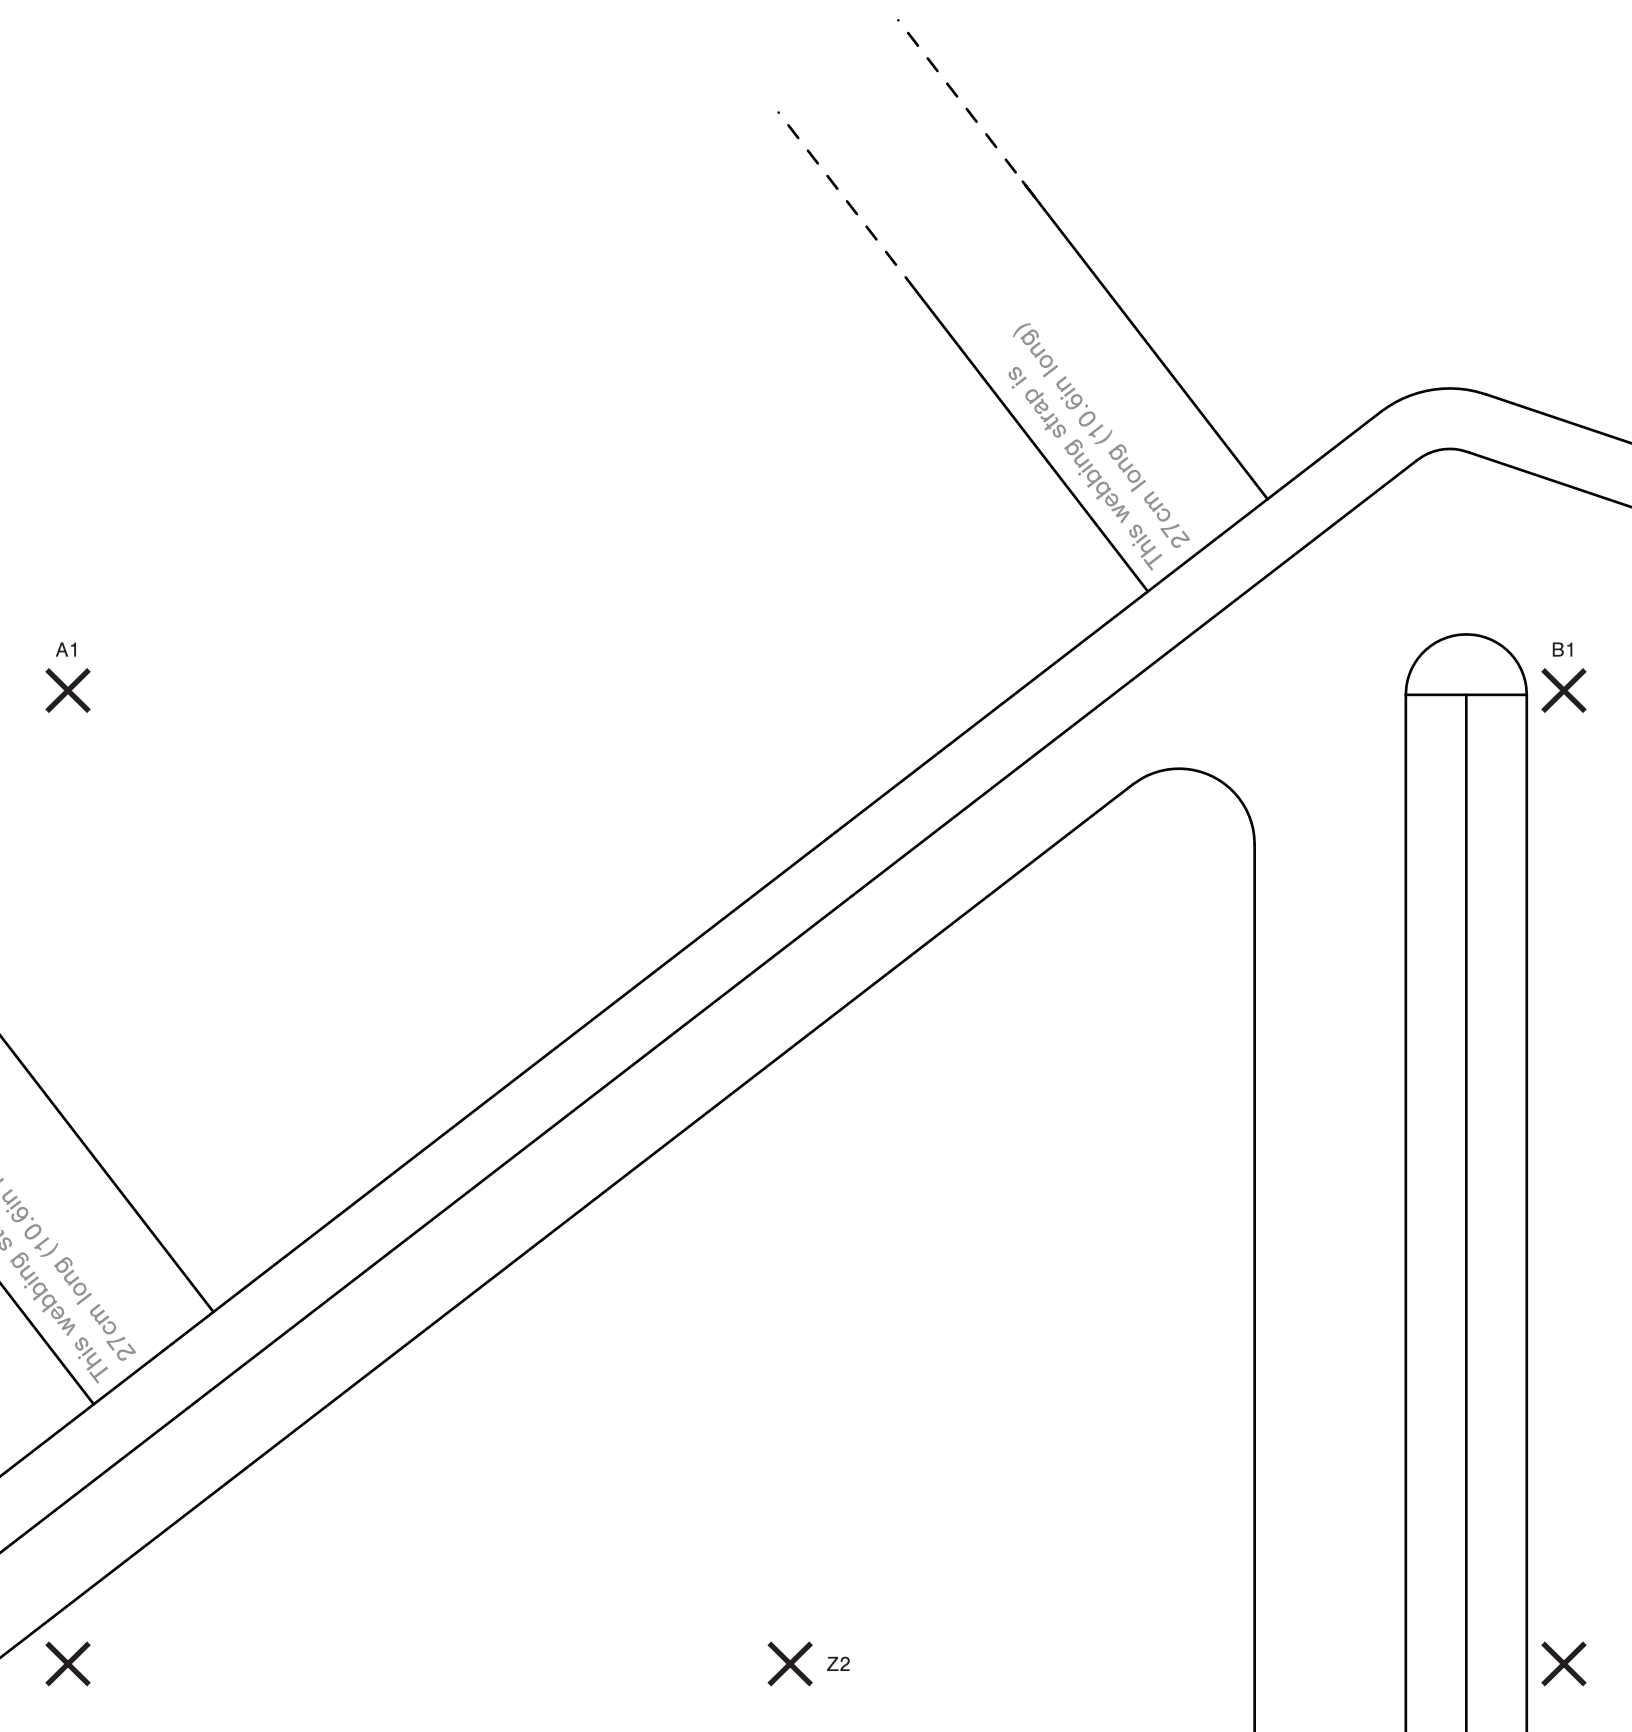


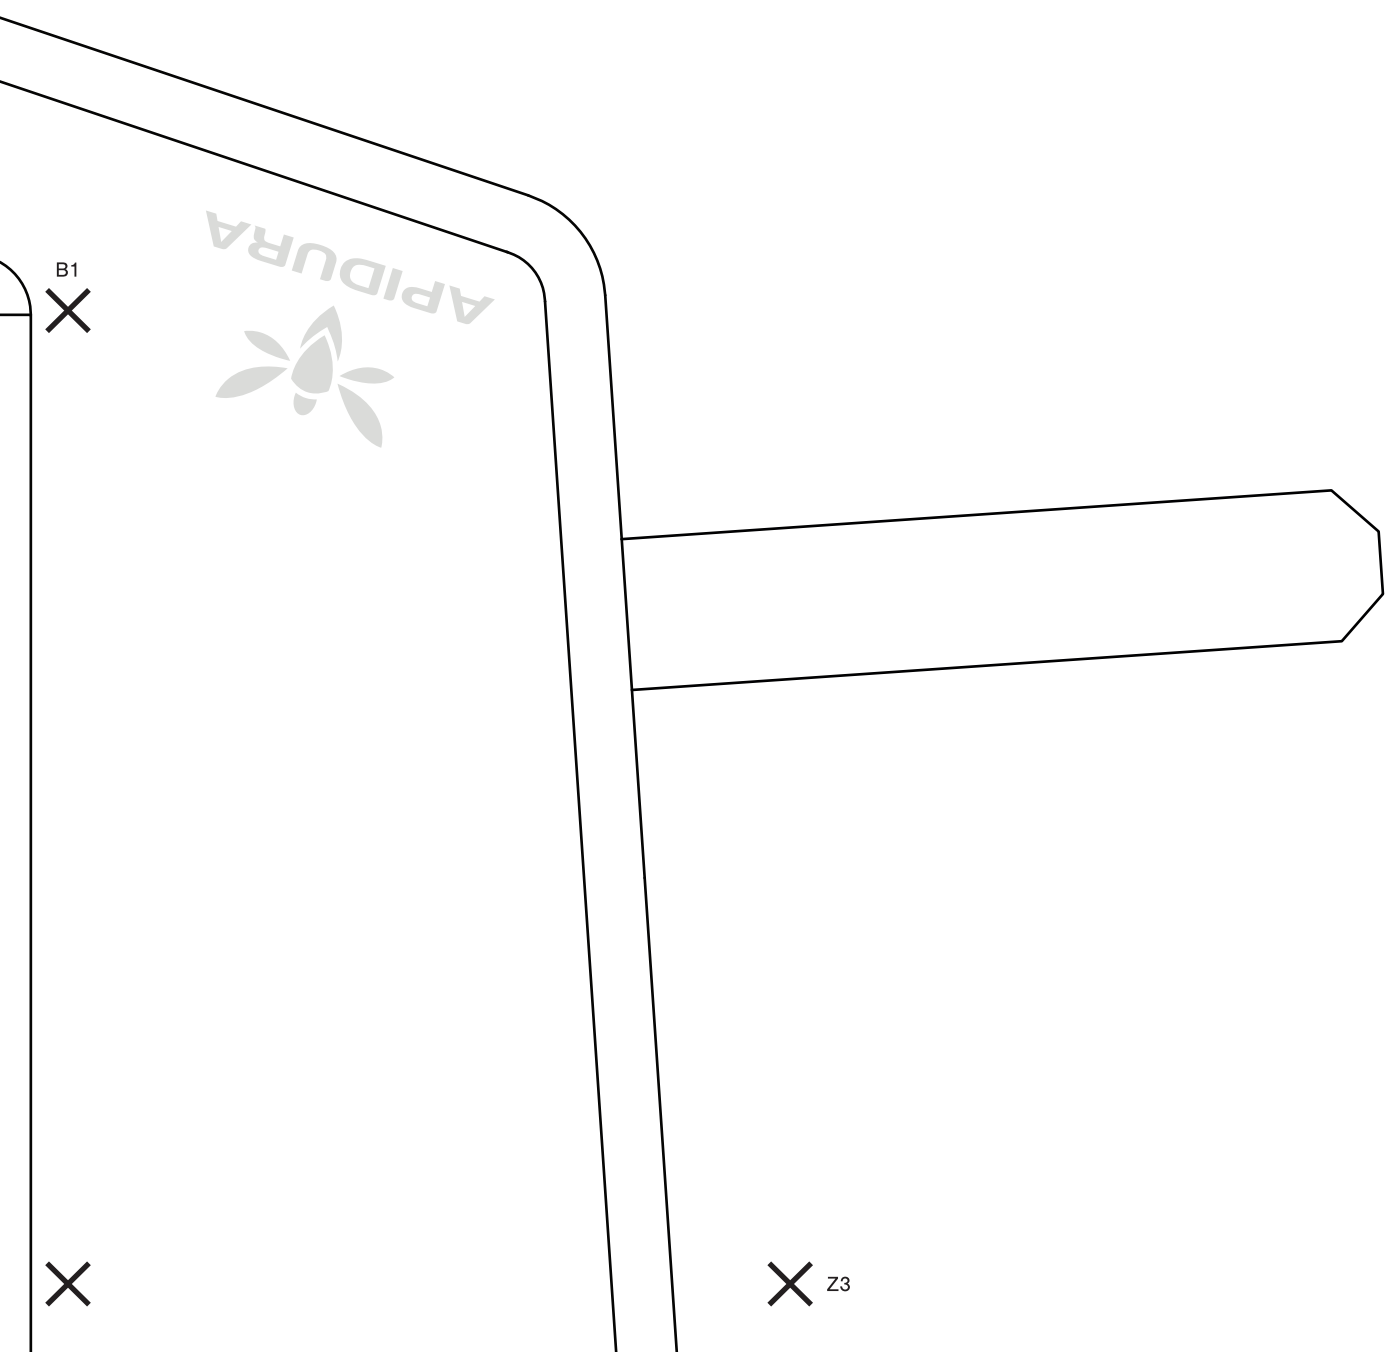

X Z1


X

This webbing strap is  
27cm long (10.6in long)

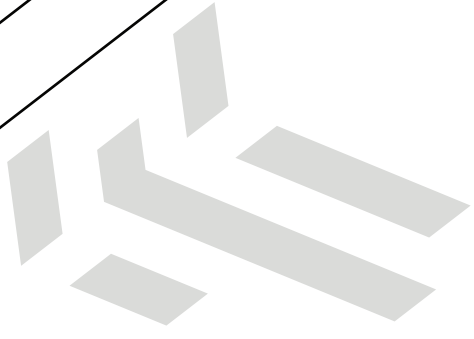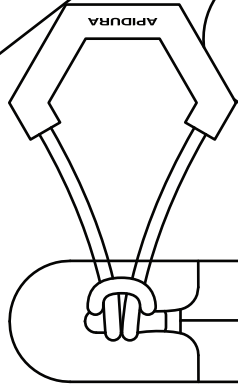

A2  
X


.....  
Alternative placement  
for the velcro strap  
.....

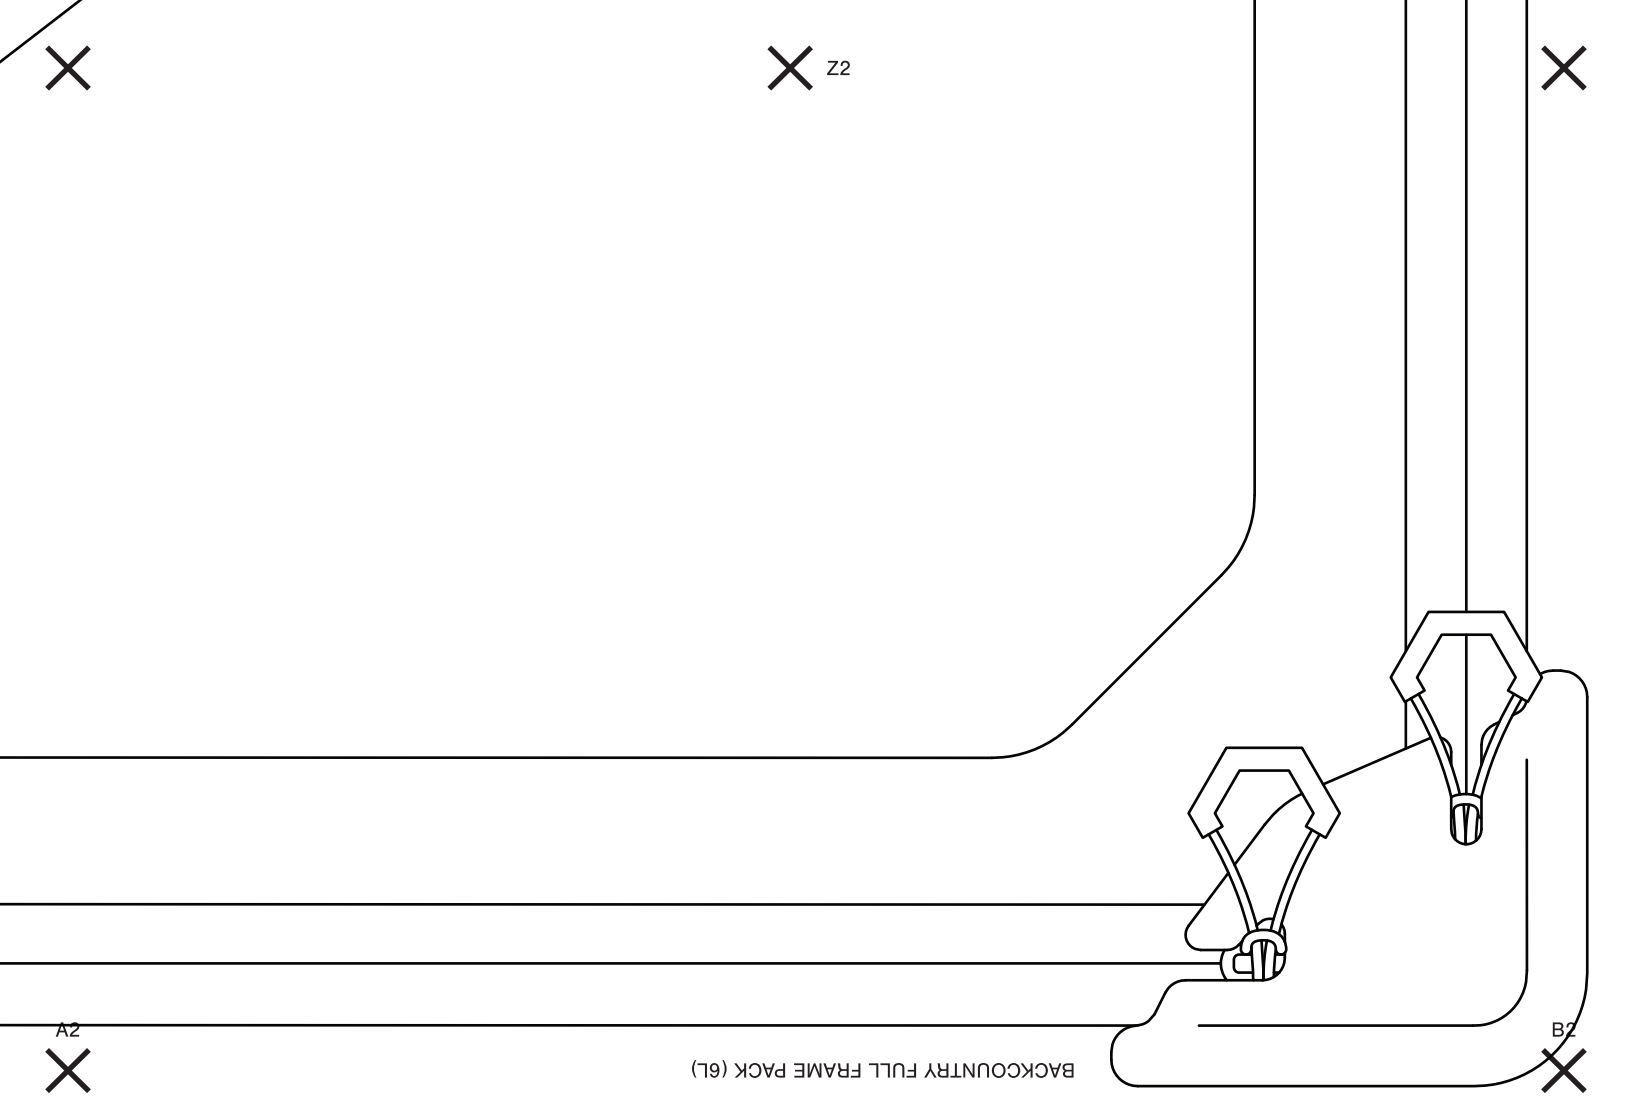

BACKCOUNTRY FULL FRAME PACK (6L)




.....  
 Alternative placement  
 for the velcro strap  
 .....





X Z3

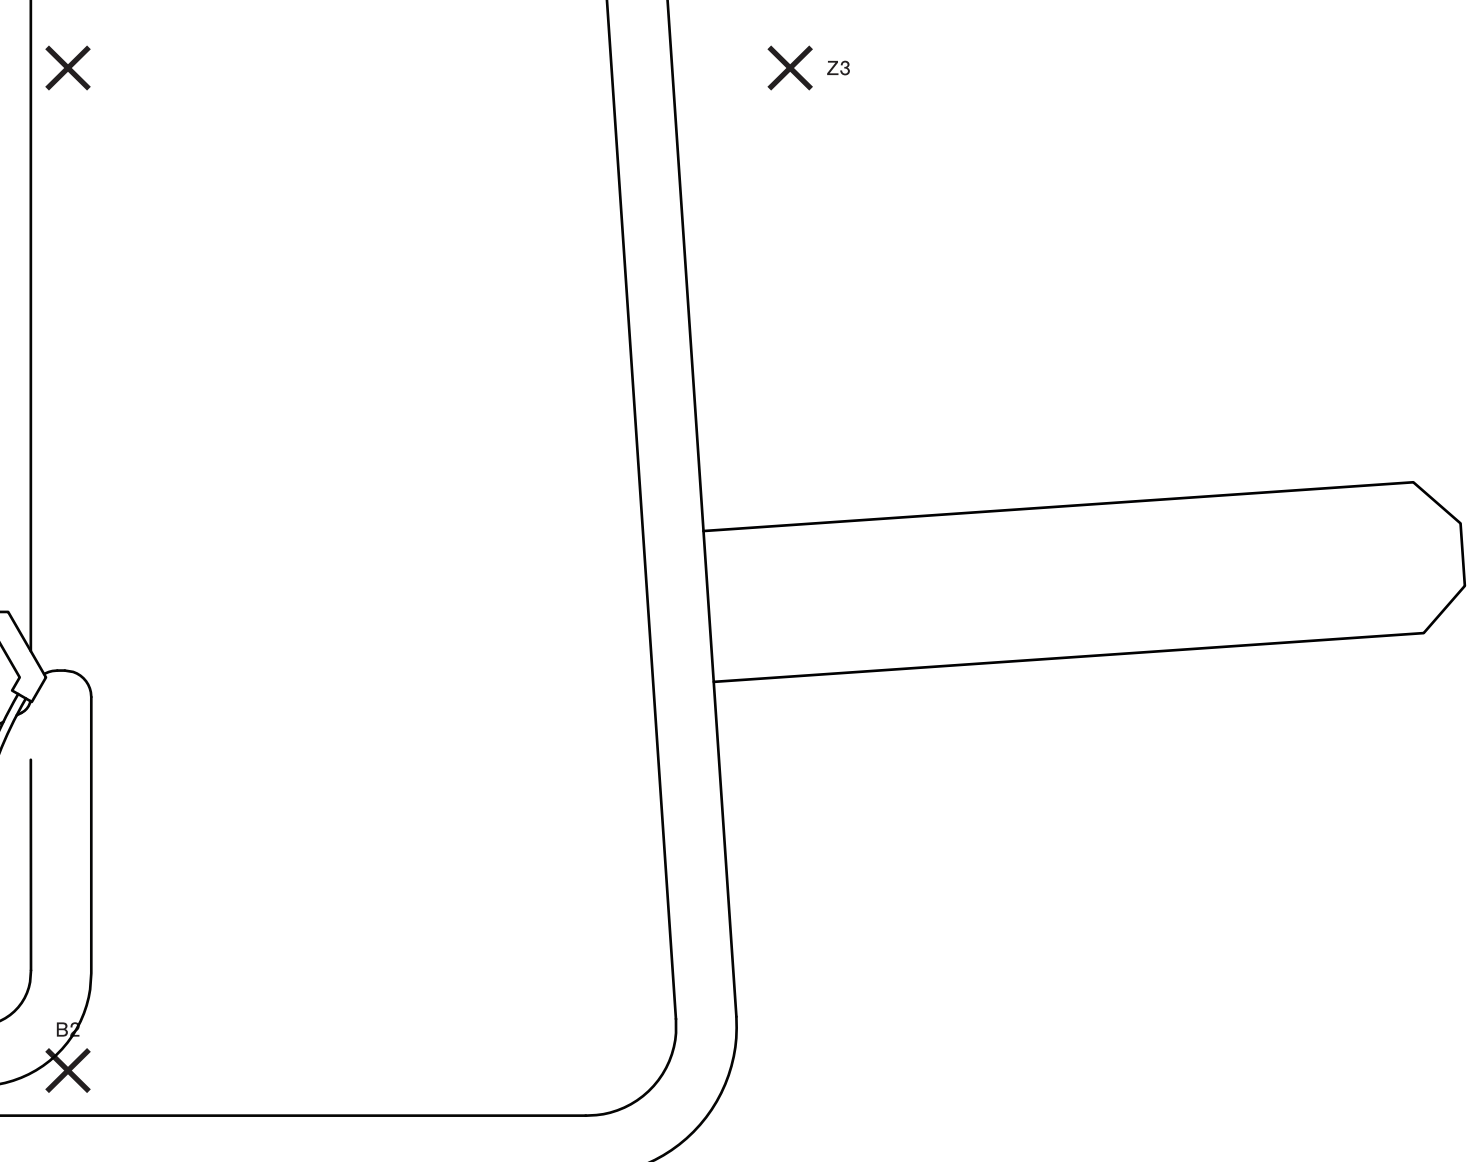

B2

