

PRINTING AND FITTING SPECIFICATIONS

- Print this document on letter size sheets of paper (8.5 x 11in).
- Ensure you print at 100 % scale.
- Measure both sides of this box to check scale is correct.
- Fit the prints together following the numbering system on the edge of each sheet. Ensure crosses are aligned.
- Tape the sheets together and cut around the Pack's outline
- When fitting this printed template to your bike, keep in mind that the Frame Pack will be more flexible as it is built from fabric.


10cm
3.9in

10cm / 3.9in

A1



SCALE EXAMPLE OF FINAL TEMPLATE

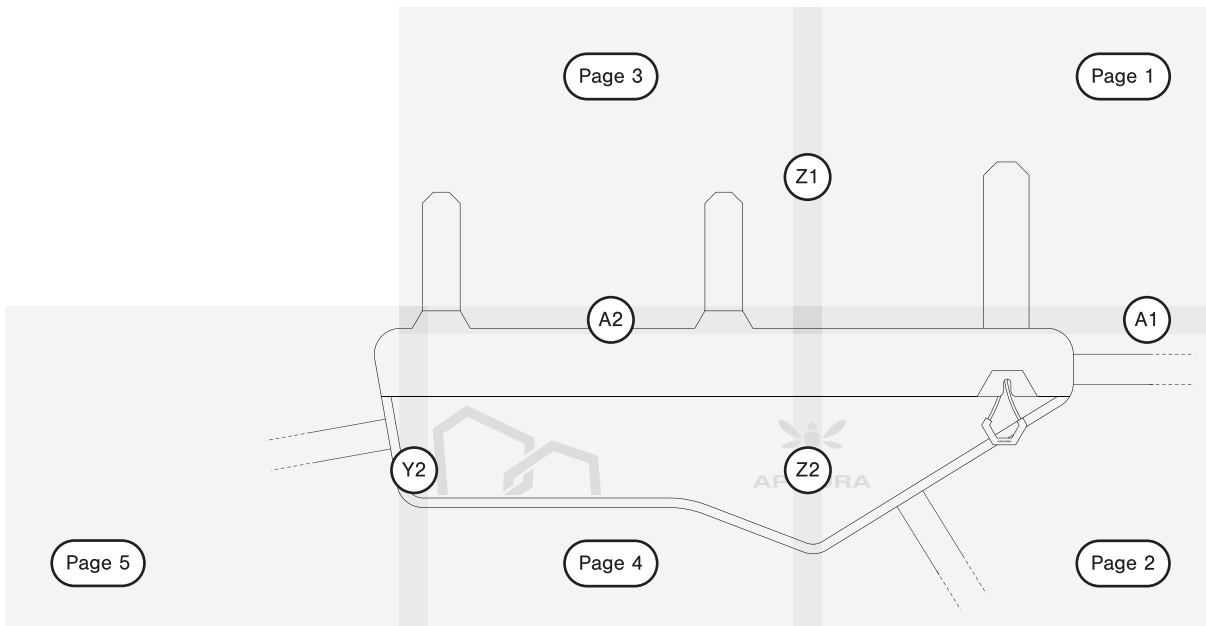

X Z1




This webbing strap is
29cm long (11.4in long)

This webbing strap is
26cm long (10.2in long)

A1
X

X

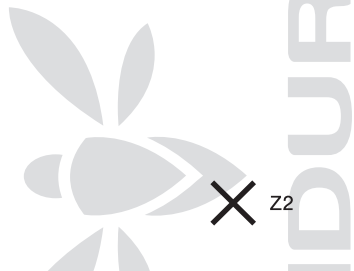


X Z2

X z1


X



A2
X

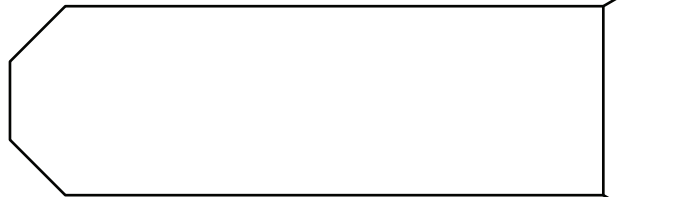

X

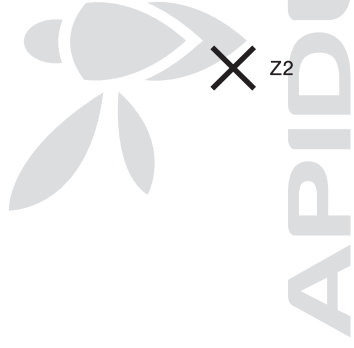

EXPEDITION FRAME PACK (4.5L)

